
Dibea

G26

VACUUM CLEANER

Instruction Manual

Please carefully read and fully understand this Manual before using this product, and keep this Manual properly for further reference.

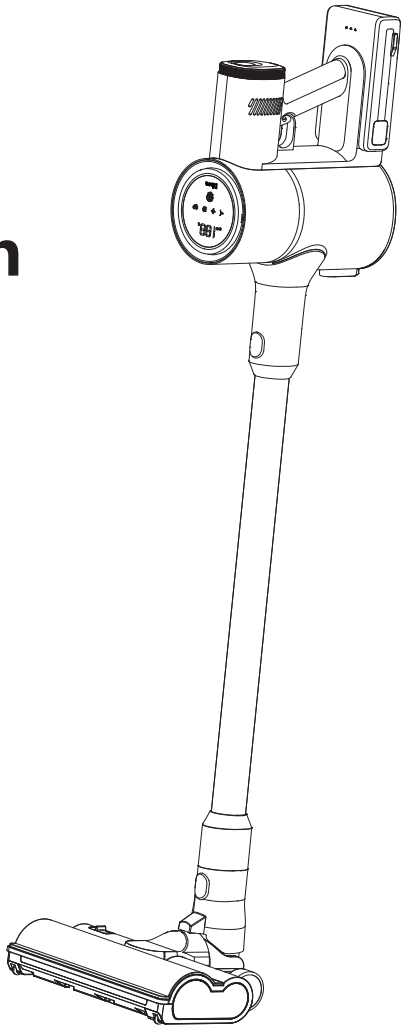

Unified national service hotline: 400-828-2055

www.dibea.com

Preface

Thank you for purchasing a household cleaning appliance from the Dibea brand. Dibea adheres to the corporate philosophy of " create good products wholeheartedly" and is committed to bringing users more high-quality and high-performance household appliances.

To facilitate your use, please read this instruction manual carefully to understand how to operate this product safely and correctly, and to obtain the desired results from it.

This manual includes the latest information as of the printing deadline, and our company is fully responsible for revising, interpreting, and explaining this manual. Our company's strategy is to continuously modify the product, so we reserve the right to change the product after the manual is printed without prior notice.

If you have any questions or suggestions about our products during use, please call our service hotline at 400-828-2055. We will be dedicated to serving you!

Content

Safe Use Guidelines 1-2

Introduction to Product Components 3-4

Instructions for Use 5

① Installation of the Floor Brush 5

② Display Screen Data 6

③ Use of Accessories 7-8

④ Charging 9

⑤ Battery Replacement 10

⑥ Clean the Dust Bucket 10-13

Common Malfunctions 14

Technical Specifications 14

Precautions 14

Table of Harmful Substances in Product 15

Warranty Notice 16-17

Safe Use Guidelines

Note: Please read the instructions carefully before formal use and keep the instruction manual for future reference.



Do not use outdoors in rainy weather;

Warning: Safety precautions are essential when using any home appliances, including but not limited to preventing hazards such as fire, electrical short circuit, personal injury,

Personal Safety:

1. Please store the machine in a dry indoor area and keep it away from children;

2. Children over 10 years old and individuals with physical or mental disabilities must be supervised when using the machine;

3. Do not allow children under 10 years old to come into contact with the machine. Keep them away when using and maintaining the machine;

4. Use the recommended accessories included in the package. Improper use or use of non-matching accessories may cause harm to the machine and to individuals;

5. Take extra caution when cleaning stairs;

6. Keep the machine away from hot surfaces;

7. Always keep the air intake clear and away from items such as fuzz and cloth that could clog the machine.

Electrical Safety:

1. Please use the batteries and charger provided in the package. Using a charger with different specifications may cause risks;

2. Please do not modify the charger in any way;

3. Before use, please check for any signs of damage or aging on the power cord of the charger. A damaged or tangled charger cord increases the risk of fire and short circuits;

4. Please handle the power cord of the charger properly;

5. Please avoid pulling the charger by the charging cable to prevent damage to the charging cable;

6. Please do not pull the charger by the charging cable to remove it. Please plug and unplug the charger properly;

7. Please do not store the charger by winding the charging cable around it;

8. The charging cable must be kept away from heat, hot objects, or sharp objects;

9. Do not replace the charging cable by yourself. If the charging cable is damaged, please contact customer service for a replacement;

10. Please do not touch the charger or the entire machine with wet hands;

11. Please do not store the machine outdoors or charge it outdoors;

12. When cleaning and maintaining the machine, make sure that the charger has been removed from the charging plug.

Safe Use Guidelines

Battery Safety:

1. This product uses a lithium battery. Do not burn or expose it to high temperatures;
2. Please use original batteries. Using the wrong type of battery may cause danger;
3. The battery should not be disassembled, hit, crushed, or thrown into a fire. If serious swelling occurs, please stop using it;
4. Do not disassemble or collide with the battery to avoid leakage of liquid inside the battery;
5. Do not short-circuit the battery's metal contacts, which can cause a short circuit danger, and avoid burns or other personal injuries caused by the battery overheating;
6. Please dispose of the battery properly according to local regulations;

※ In order to reduce burns, fires, electric shocks, or any other injuries, please follow the above rules.

Service:

1. Before use, please carefully inspect the product for any damage or abnormalities;
2. Do not use the product if any part is damaged or defective;
3. Please contact a professional after-sales or qualified repair organization to perform repairs in accordance with relevant safety regulations. Repairs performed by non-professionals may result in danger;
4. Do not modify the product in any way to avoid causing personal injury;
5. Please use replacement parts or spare parts provided or recommended by the manufacturer.

Usage tips:

1. This vacuum cleaner is a dry vacuum cleaner;
2. This vacuum cleaner does not have waterproof function, do not vacuum water or damp waste;
3. This vacuum cleaner cannot vacuum any burning or smoking waste;
4. Please strictly follow the instructions for use;
5. Do not use this product on cement roads, asphalt roads, and other rough surfaces;
6. This vacuum cleaner is for household use only and should not be used in factories or commercial places;
7. Do not use it to vacuum construction debris and heavy metal dust .




Warning:

1、Please do not clean surfaces of the machine by using water, solvents or polishes, but using dry cloth;
2、Never clean this product by machine or soaking your vacuum cleaner in water.

Product Component Introduction

















create good products wholeheartedly

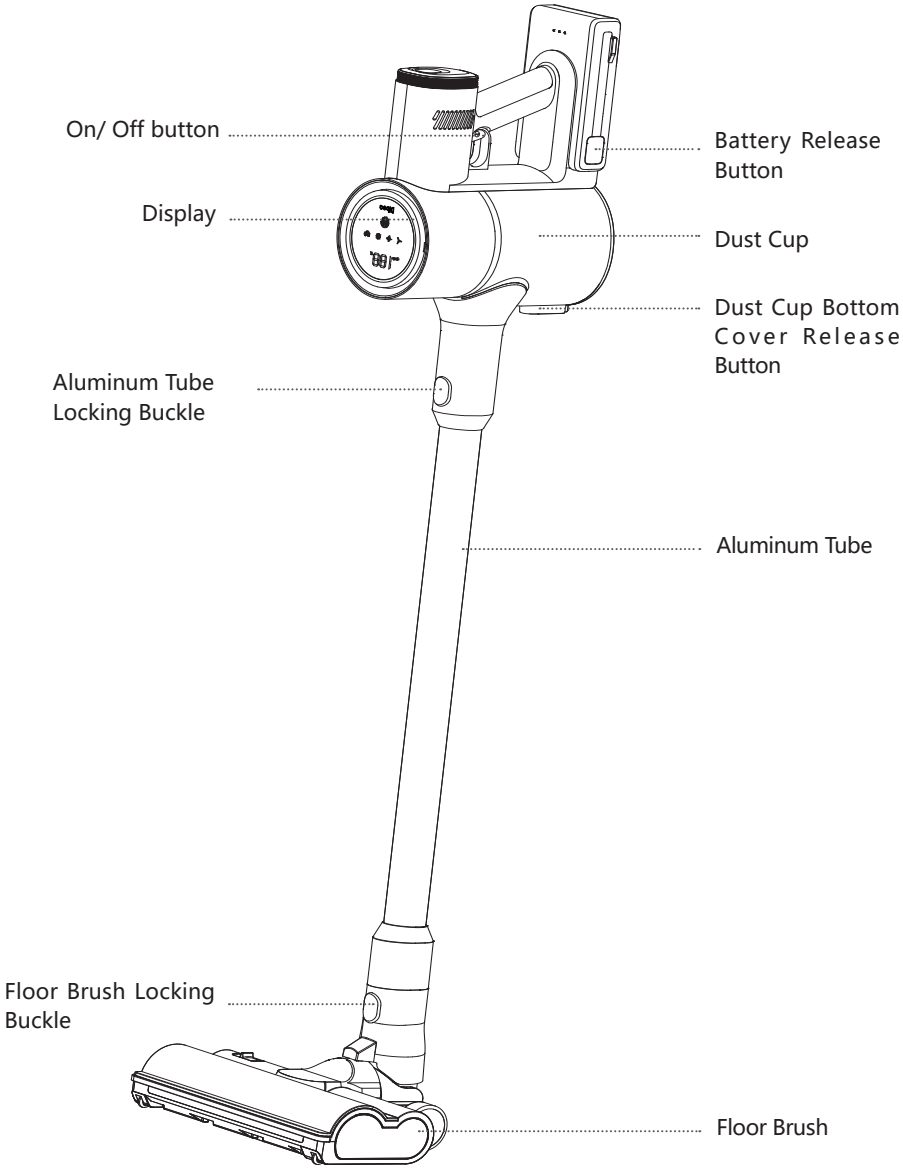

Product Parts Introduction


create good products wholeheartedly

Accessories

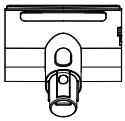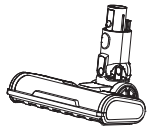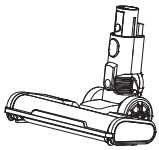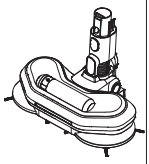
Charger	Cleaning Tool	Triangular Suction Head	Long flat suction	V-shaped rolling brush bar	Air intake filter pad
					
1	2	1	1	1	1
FS016 Sweeping Brush	Charging Stand (two-section)	Wall Bracket	FS003B Mite Removal Brush	FS009 Mite Removal Brush	FS006 Sweeping Brush
					
1	1 (Optional)	1 (Optional)	1 (Optional)	1 (Optional)	1 (Optional)
FS007 Sweeping Brush	FS008 Mopping Brush	FS007 Tank	Metal Spiral Roller	Soft Pile Roller	Extension Tube
					
1 (Optional)	1 (Optional)	1 (Optional)	1 (Optional)	1 (Optional)	1 (Optional)
Bent Hose	Long Flat suction nozzle head	Telescopic tube	Dust Removal Soft Brush		
					
1 (Optional)	1 (Optional)	1 (Optional)	1 (Optional)		

I . Install the Sweeping Brush


1. As shown, align the brush connector with the aluminum tube port and push it gently until hearing a "click", which means succeed (when disassembling, you only need to hold down the latch button and pull the brush downwards).

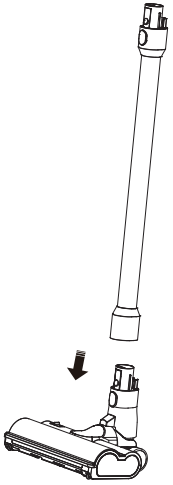

2. As shown, align the aluminum tube connector with the main body port, and push it gently until hearing a "click", which means succeed (when disassembling, you only need to hold down the latch button and pull the tube downwards).

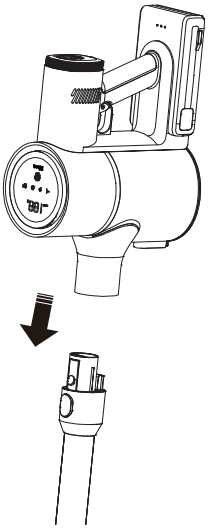


3. As shown in the figure, press the power switch button to start the machine

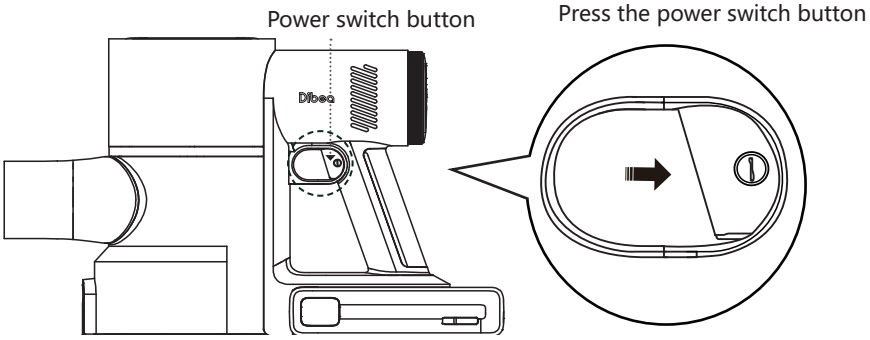

a) When the power button is pressed for the first time, the machine operates at medium speed, with the medium speed indicator lit up and the LED ring glowing purple.


b) After turning on the machine, press the touch button " " ffor the first time to shift to high speed, with the high speed indicator lit up and the LED ring glowing red; press the touch button " " for the second time to shift to low speed, with the low speed indicator lit up and the LED ring glowing blue.

c) When the power button is pressed for the second time, the machine stops working.

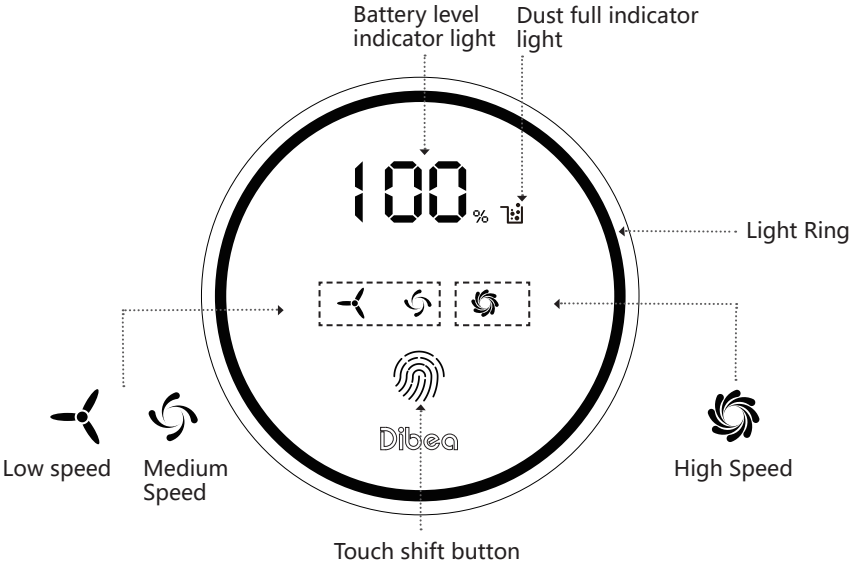


4、Disassembly of the Roller Brush

a) Slide the illustrated button to the left to remove the roller brush cover

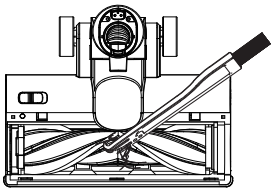


Cut off

Use the blade to cut off the hair and other trash that is wrapped around the roller

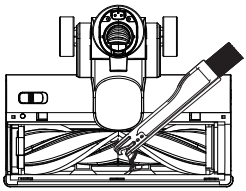

Rake

Clean up the cut trash with rake.

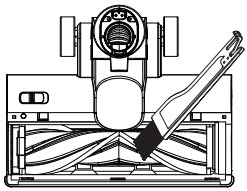


Sweep


Use the hairbrush to clean up dust and other small particulate waste.

b) Disassembly of the Roller Brush


Slide the illustrated button to the left to remove the roller brush cover.

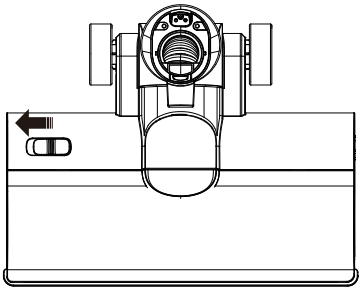

Lift the illustrated handle at the left end of the roller brush to remove the brush and clean it.

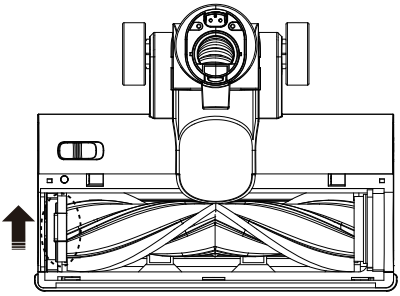


Align the illustrated right end of the roller brush with the slot, and then press the left end of the brush down into the groove. The roller brush can then be successfully installed. Finally, snap the roller brush cover back into place.

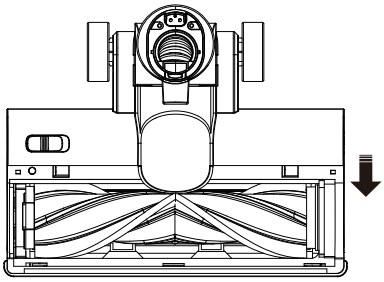


Ⅱ. Accessory Usage Instructions

1. Triangular Brush: Insert the triangular brush directly into the interface of the main unit.

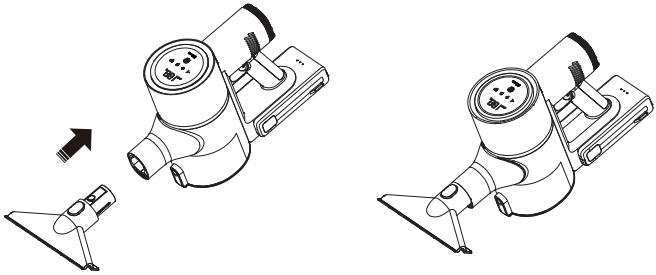

2. Flat Brush: Align the interface of the flat brush with the interface of the vacuum cleaner main unit, as shown in the diagram. Gently push until you hear a "click" sound, indicating that installation is complete. (To remove, simply press the lock button shown in the diagram and pull downwards.)

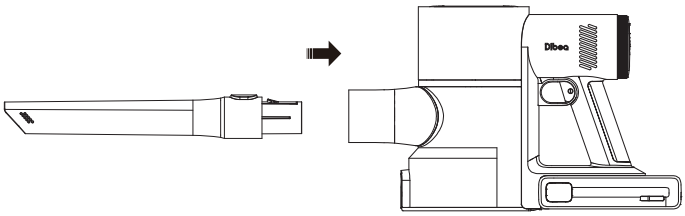

Ⅲ .Charging

1) When the battery indicator light shows less than 10%, it means that the machine's battery is low and needs to be charged in a timely manner;

2) When charging, connect the charger to the power source and the machine. The green light flashing on the machine indicates that it is charging.

Reminder: There are two ways to use the hanging rack, depending on different configuration needs;


① Use expansion screws to fix the storage rack on the wall to hang the vacuum cleaner;

② Hang the vacuum cleaner directly on the storage rack;

There are two ways to charge the main unit, depending on different configuration needs;

① Directly plug the charger into the main unit charging socket for charging;


② Directly plug the charger into the receptacle of the hanging rack or storage rack for charging.

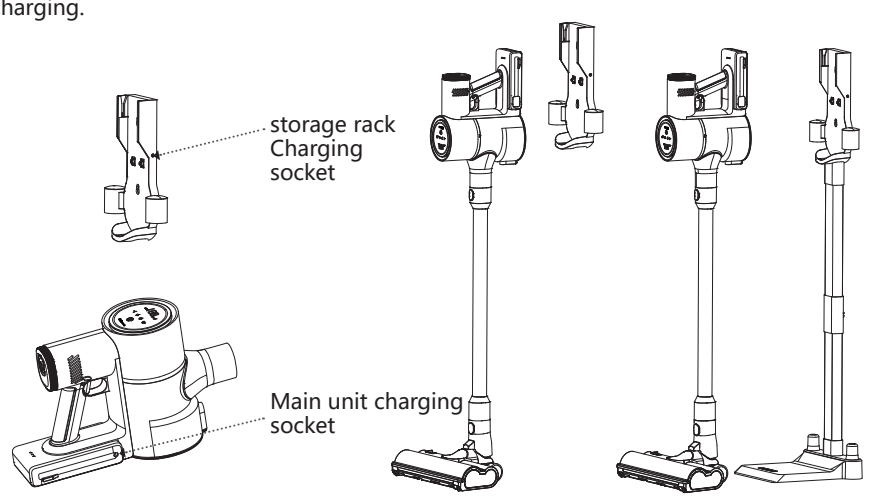

Method 1: hanging rack Method 2: Storage rack

3) Battery pack indicator light

1. Blue LED1 flashes, charging / low voltage;
2. Blue LED1 stays on and LED2 flashes, charging;
3. Blue LED1and LED2 stay on and LED3 flashes, charging;
4. Blue LED1, LED2,and LED3 stay on, fully charged.

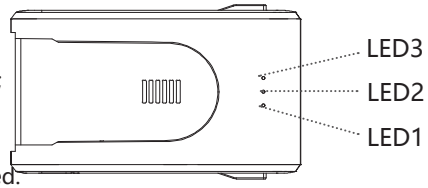


Note: The above translations are based on context assumptions, and for accurate translations, additional information may be required

IV .Battery Replacemen

Press the battery release button


Pull the battery out towards the back

Insert the new battery in the forward direction

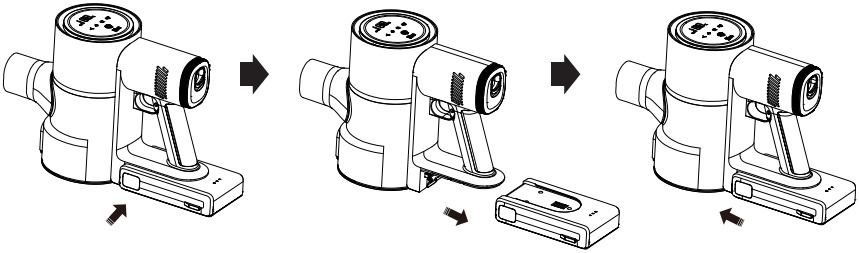


V .Battery Replacement

Press the battery release button. Pull the battery out towards the back.
Insert the new battery in the forward direction.

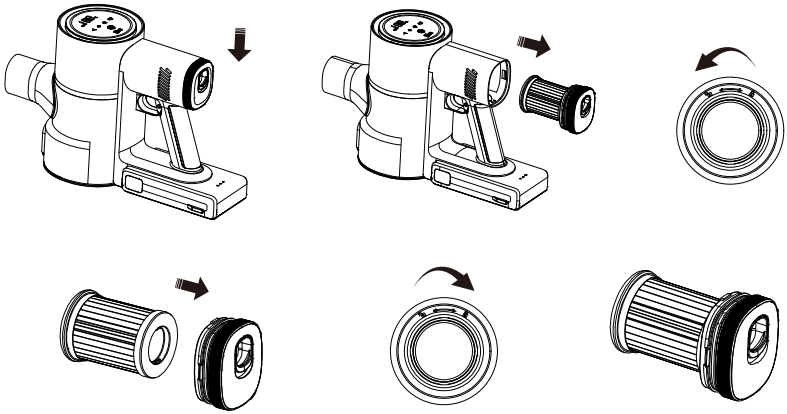


VI . Dustbin Cleaning Method


1) Follow the diagram and press the dustbin bottom cover release button. The dustbin bottom cover will automatically pop open, allowing you to pour out the garbage.

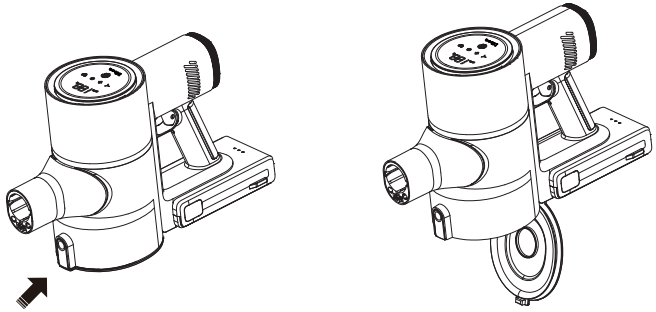

2) Flick the dustbin release button and pull it backwards with force. Hold the dustbin suction port and lift it up to separate the dustbin components.

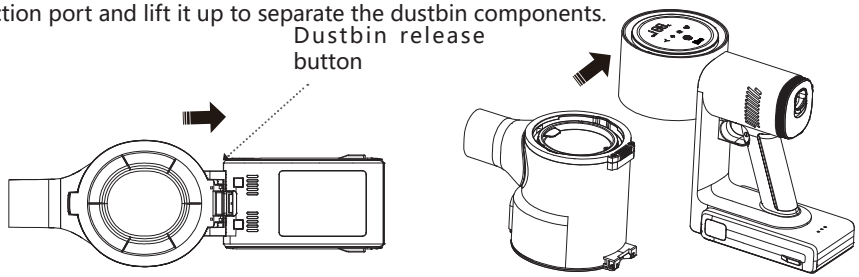


3) Both the HEPA filter and cyclone can be cleaned with water

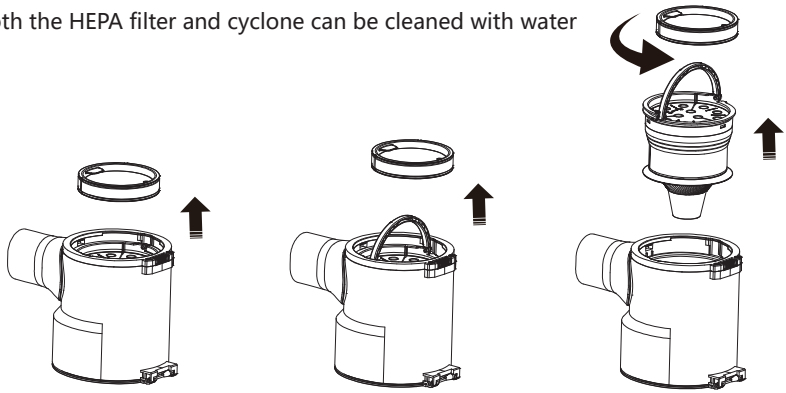


Take out the filter cotton | Pick up the handle | Rotate in the unlock direction and take out the cyclone cone


4) Using the cleaning brush, clean the inner and outer walls of the cyclone cone and insert the cleaning brush into the interlayer space as shown in the diagram to clean the interlayer

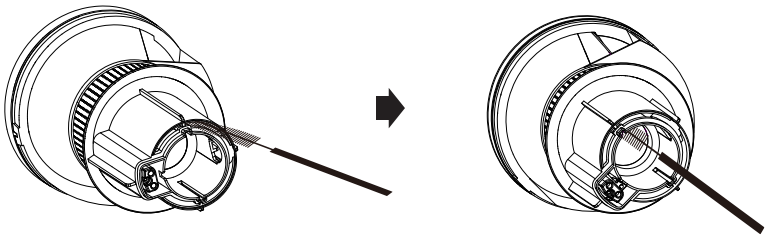


5) After cleaning, it is essential to completely air dry the HEPA filter and cyclone before putting them back into the machine for use.

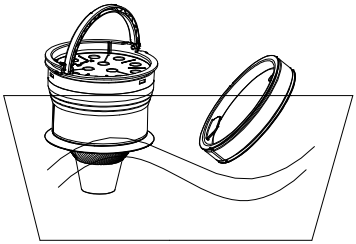


6) Install the HEPA filter according to the direction shown in the diagram.

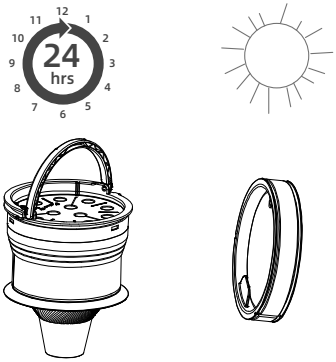

7) Place the cyclonic cone into the dust cup, and rotate it in the direction indicated in the diagram. After the rotation is complete, push down on the handle and install the filter cotton. (Note: If the handle cannot be pressed down firmly, the cyclonic cone may not be properly installed or rotated into place.)

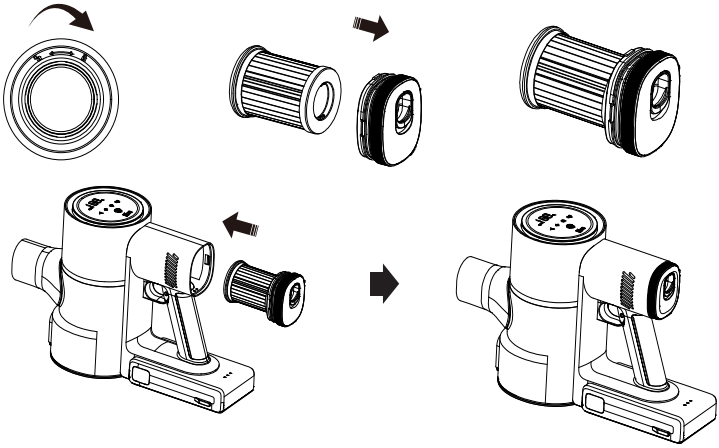

7) Rotate the bottom cover of the dust bin as shown in the diagram. When you hear a "click" sound, it indicates that the cover is properly installed.

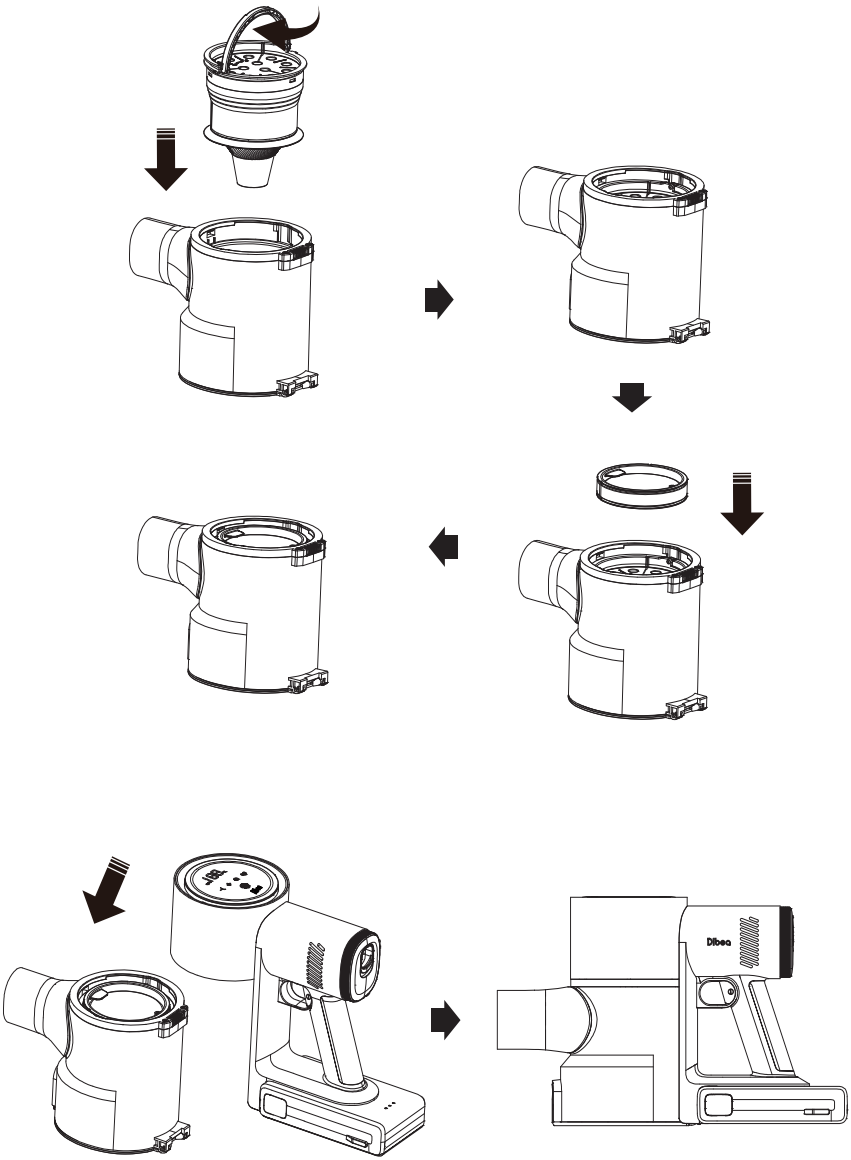

Common Faults and Solutions

※ Common Machine Malfunctions and Solutions

Inadequate Dust Suction (Dust Cup Full Indicator Light On)	1. Empty the dust cup. 2. Check if the dust cup inlet or duct is blocked. 3. Check if the filter sponge is clogged and needs cleaning or replacement. 4. Check if the brush inlet is blocked.
Machine Stops Working	1. Charge the battery. 2. Check if the brush inlet, duct, and dust cup inlet are blocked. 3. Check if the roller brush is stuck
Battery Cannot Be Charged	1.Check if the charging head is properly connected. 2.Check the power outlet. 3.Check if the charger is damaged
Roller Brush Is Stuck (Roller Blocking icon is lit up)	1. Clean the roller brush

※ Product Specifications

Items	Specifications
Rated Voltage	25.9V
Rated Power	500W
Battery Capacity	2500mAh
Charging Time	3-4hours
Adapter Input Voltage	100-240V
Adapter Output Voltage	30V
Dust Cup Capacity	680ml

※ Precautions

1) **Before using the vacuum cleaner**

please remove large and sharp objects to prevent the machine from being damaged by collision. Do not use this product to suck up flammable materials or liquids such as gasoline, cigarettes, alcohol, etc;

2) **When using the vacuum cleaner**

please keep a safe distance from heating or hot objects such as radiators, cigarette butts, etc;

3) **When replacing the filter**

do not overturn the machine to prevent liquid or dust from falling into the motor, which may cause malfunctions and hazards.

The following table is prepared according to the Administrative Measures for the Use Limitation of Hazardous Substances in Electronic and Electrical Products

Hazardous substances in the table below follow the "SJ/T 11364-2014 Requirements for Identification of Restricted Use of Hazardous Substances in Electronic and Electrical Products".

Component Name	Hazardous Substances					
	Lead (Pb) and its compounds	Mercury (Hg) and its compounds	Cadmium (Cd) and its compounds	Hexavalent chromium (Cr(VI)) and its compounds	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Circuit board assembly	×	○	×	○	○	○
Electrical Components	×	○	○	○	○	○
Power Cord	×	○	○	○	○	○
Battery	×	○	○	○	○	○
Metal parts	×	○	○	○	○	○
Plastic parts	○	○	○	○	○	○
Accessories	×	○	×	○	○	○

○: indicates that the content of the harmful substance in all homogeneous materials of this component is below the limit requirements specified in "GB/T 26572 current valid version".

×: indicates that the content of the hazardous substance in at least one homogeneous material of the component exceeds the limit requirements specified in GB/T 26572 current valid version, and there is no developed alternative in the industry at present, which complies with the environmental requirements of European Union RoHS Directive.

※ Please dispose of the battery safely with following steps:

1) If the battery provided contains materials harmful to the environment, the battery must be removed before the product being disposed of;

2) The product must be powered off when removing the battery;

3) The waste battery shall be disposed safely and properly, and shall not be dumped into fire, water or soil.

If the waste battery touches one's skin or clothing, please rinse with clean water to avoid skin discomfort, and take prompt medical treatment from hospital.

Warranty Notice

create good products wholeheartedly

Warranty Notice

1) Starting from the purchase date, the whole machine (excluding battery, motor, and accessories), charging dock, and power adapter are covered under a 2-year warranty, while vulnerable parts (motor, battery) are covered under a 1-year warranty, and consumables (roller brush, filter, cleaning brush) are covered under a 3-month warranty. Free gifts are not covered under the warranty;

2) Please keep your purchase invoice and relevant documents properly as they serve as important proof for warranty services. The warranty only applies to products purchased and used within the Chinese mainland (excluding Hong Kong, Macau, and Taiwan);

3) If the product malfunctions during the warranty period and cannot be resolved by following the troubleshooting instructions in the manual, please contact our nationwide customer service hotline at 400-828-2055.

4) We provide lifetime repair services for our products, but customers will be responsible for repair fees, material fees, and transportation costs if the warranty period has expired.

Warranty Card

This card contains detailed maintenance records and instructions for your reference in case of normal maintenance, repairs, or returns. Therefore, please keep this card safe and secure.Products".

Warranty Exclusions

Under the following circumstances, Dibea will not be able to provide free warranty services for your machine during the warranty period:

1) Damage or malfunctions caused by improper use, lack of maintenance, or other improper usage not in accordance with the instructions provided in the user manual;

2) Normal wear and tear or damage to consumable parts, such as brushes, filters, and cleaning brushes;

3) Damage caused by human factors or irresistible factors;

4) Warranty period exceeding three packages, invalid proof of purchase such as warranty cards or invoices, or warranty card and invoice information does not match;

5) Damage or malfunction caused by using Dibea products for any purposes other than normal household use;

6) Damage or malfunction caused by the use of non-Dibea original accessories or parts, or repairs or modifications by non-Dibea service centers;

7) Shortened battery discharge time due to battery aging or use;

8) Other malfunctions and damage caused by issues not related to the product's design, manufacturing, or quality.

※ Important Reminde

Dear user:

In order to ensure the after-sales warranty and exchange of the machine, it is recommended that you keep the packaging box for at least 30 days from the date of receipt! If your machine needs to be sent back to the factory, please follow the steps below.

Warranty Notice

Preparing for shipment:
Please call the customer service number at 400-828-2055 to register your information and complete the warranty card along with the machine for the return to the factory.

About mailing items:
Note: The important basis for warranty service is the purchase invoice and related vouchers. When repairing, the warranty basis needs to be provided. When returning the product, please send back the entire machine (including the host, accessories, and gifts), invoice, and purchase voucher together.

Warranty Card

Your Name: _____ Product Model: _____

Contact Phone Number: _____ Machine Serial Number:_____

Contact Address:_____ Invoice Number:_____

Purchase Date:_____ Order Number: _____

Repair Date	Description of Fault / Reason for Fault	Used Equipment	Completion Date of Repair	Signature of Repair Personnel

Dibea

Suzhou Dibea Electrical Technology Co., Ltd.
Address: No.19 Fuli Road, Wuzhong District, Suzhou, Jiangsu, China